

Welcome

Thank you for choosing an Arlo battery charging station. Charging Arlo batteries is easy.

What's Included



Charging station



Power cable



Window decal



Power adapter

Charge the Batteries

 Plug the power adapter into an electrical outlet.



Note: You must use the Arlo Pro power adapter and cable when you use the charging station.

- 2. Connect the cable to the charging station and plug it in.
- Insert a battery (not included) into a charging station bay.



Align the battery with the grooves inside the charging station bay.

- Press the battery into the charging bay until you hear a click.
 The LED lights solid amber to indicate that the battery is fully inserted and is charging.
- To charge a second battery, insert another battery into the other charging station bay.
 When the batteries are fully charged, the LED lights solid green.
- To remove a battery from a charging bay, press the battery and release it.
 A click sound indicates that the battery is disengaged and can be removed.

You're Done!

To view useful tutorial videos, find troubleshooting tips, or get support, visit *support.arlo.com*.

Charging Station LED Guide



- Solid green
 A battery is inserted and is fully charged.
- Solid amber
 A battery is inserted and is charging.
- Fast blinking amber
 A battery is inserted
 and the charge failed.
- Off
 The charging station is powered off or no batteries are inserted.

6

©NETGEAR, Inc., NETGEAR, the NETGEAR Logo, and Arlo are trademarks of NETGEAR, Inc.

Compliance

For the current EU Declaration of Conformity, visit http://kb.netgear.com/app/answers/detail/a_id/11621/.

For regulatory compliance information, visit http://www.netgear.com/about/regulatory/.

NETGEAR[®]

350 East Plumeria Drive San Jose, CA 95134, USA

August 2016



Building 3, University Technology Centre Curraheen Road, Cork, Ireland



201-20612-01